SINCE 1886

READ AND SAVE THESE INSTRUCTIONS

ANGLE CEILING MOUNTING

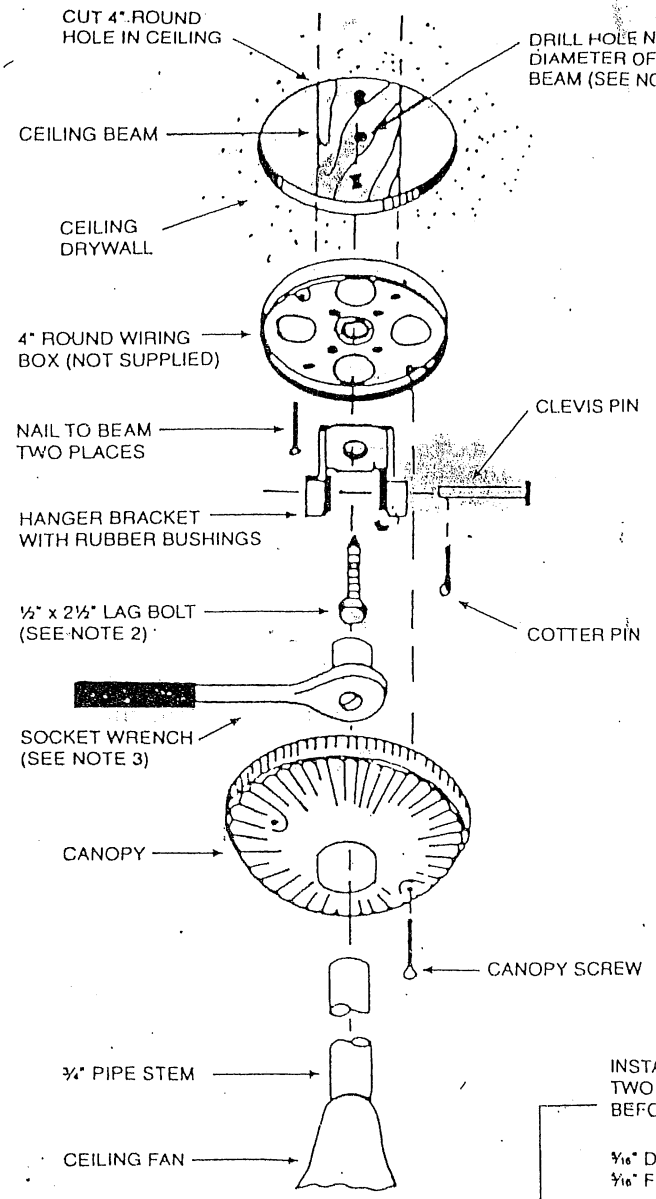
CUT 4" ROUND HOLE IN CEILING
CEILING BEAM
CEILING DRYWALL
4" ROUND WIRING BOX (NOT SUPPLIED)
NAIL TO BEAM TWO PLACES
HANGER BRACKET WITH RUBBER BUSHINGS
½" x 2½" LAG BOLT (SEE NOTE 2)
SOCKET WRENCH (SEE NOTE 3)
CANOPY
¾" PIPE STEM
CEILING FAN
DRILL HOLE NO LARGER THAN MINOR DIAMETER OF LAG BOLT (.371") 2" DEEP IN BEAM (SEE NOTE 1)
CLEVIS PIN
COTTER PIN
CANOPY SCREW

ANGLE BEAM MOUNTING

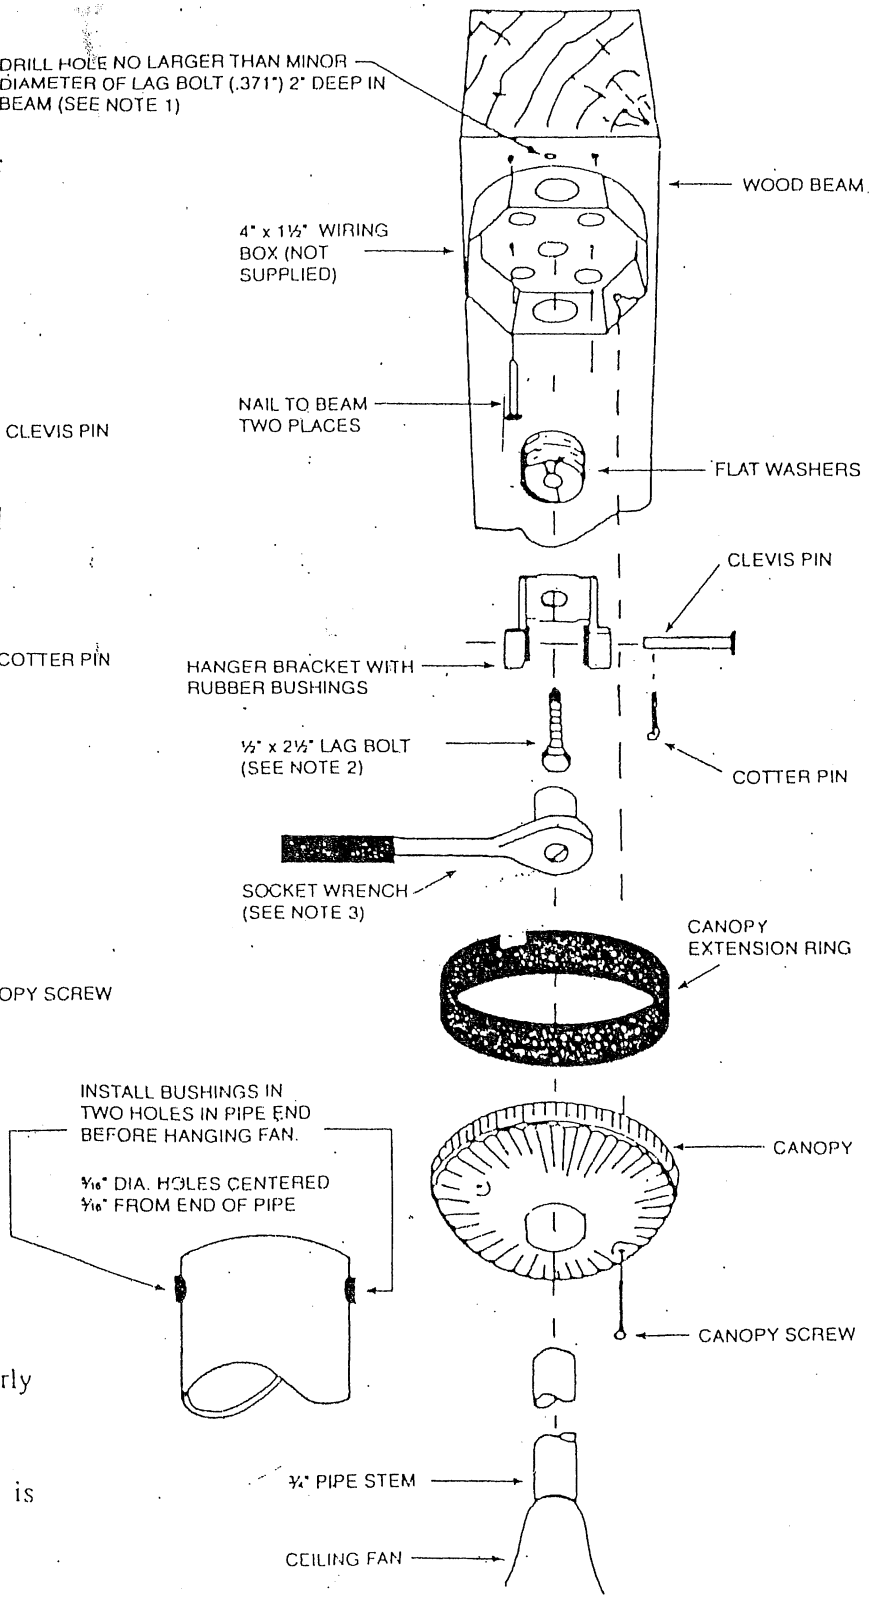
WOOD BEAM
4" x 1½" WIRING BOX (NOT SUPPLIED)
NAIL TO BEAM TWO PLACES
FLAT WASHERS
CLEVIS PIN
HANGER BRACKET WITH RUBBER BUSHINGS
½" x 2½" LAG BOLT (SEE NOTE 2)
COTTER PIN
SOCKET WRENCH (SEE NOTE 3)
CANOPY EXTENSION RING
INSTALL BUSHINGS IN TWO HOLES IN PIPE END BEFORE HANGING FAN.
5/16" DIA. HOLES CENTERED 5/16" FROM END OF PIPE
CANOPY
CANOPY SCREW
¾" PIPE STEM
CEILING FAN

Installation Notes:

1. Hole in beam must be straight to properly seat ½" lag bolt.
2. Do not use lubricant on screw threads.
3. A socket wrench or box end wrench is essential to install lag bolt.

©1995 HUNTER FAN C

ANGLE BEAM MOUNTING

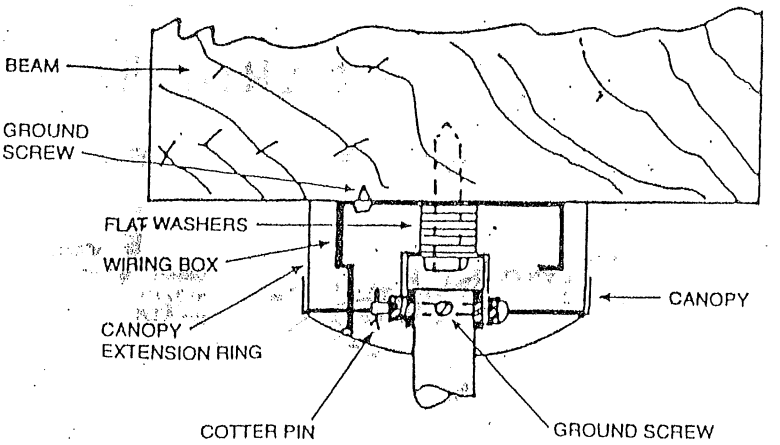

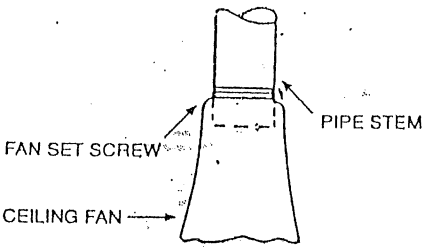

ANGLE CEILING MOUNTING

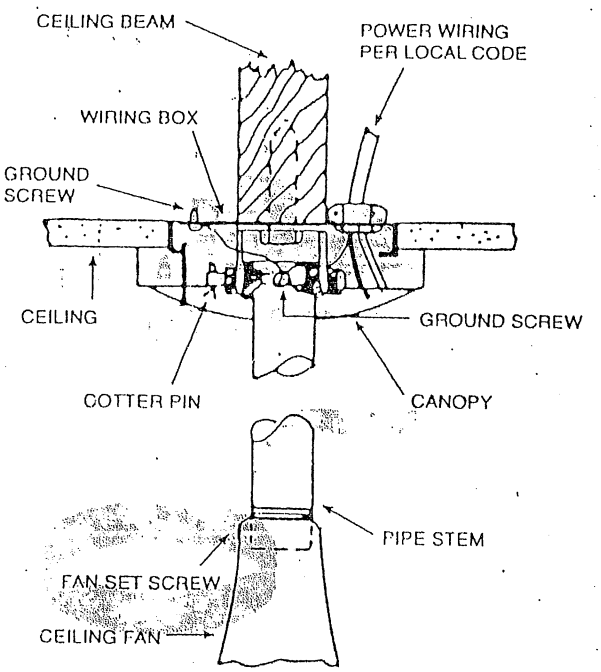

Angle Mounting:

KITS: 22170 - Brown

22172 - Brass

22174 - Black

22176 - White

HUNTER FAN COMPANY
2500 FRISCO AVENUE
MEMPHIS, TN 38114

©1995 HUNTER FAN CO.